 


FEATURES

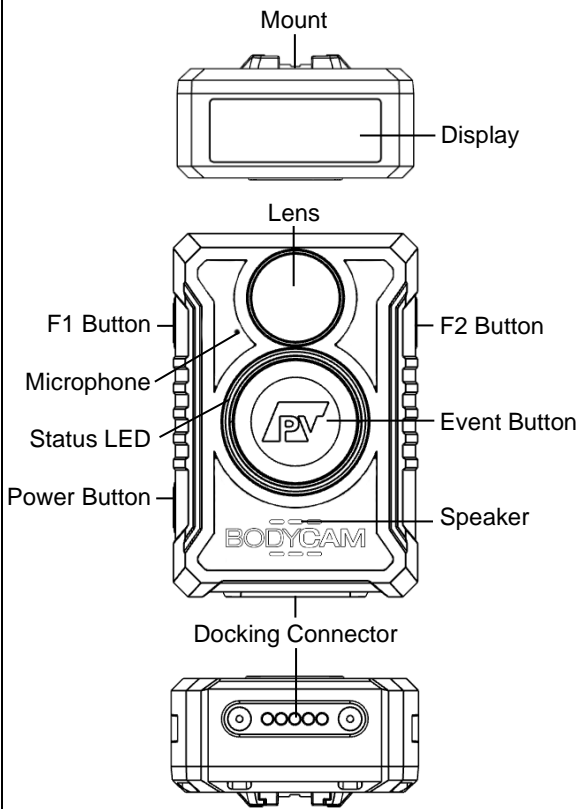 


USER FUNCTIONS

Function	Action
Power On	Press and hold the Power button for 3 seconds.
Power Off	Press and hold the Power button for 3 seconds while the camera is not recording Events.
Start Event Recording	Double-press the Event button.
Stop Event Recording	Press and hold the Event button for 3 seconds.
Add Marker During an Event	Single press the Event button while Event recording.
Mute or Unmute Audio Recording	Press and hold F1 button for 3 seconds.
Enter or Exit Covert Mode	Press and hold the F1 and F2 buttons simultaneously for 3 seconds.
Temporarily Increase Display Brightness	Single press the power button to increase the display brightness for 5 seconds.

UPLOADING

 
Insert the camera into a single or multi-unit dock to charge the battery and upload files.

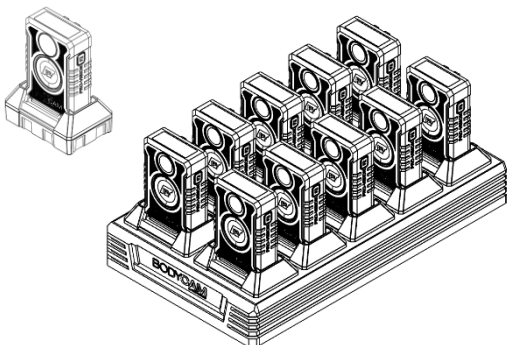







 
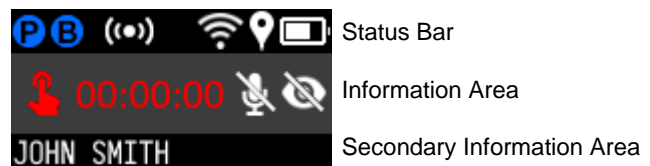 







The cameras will immediately begin uploading once connected. The camera display will show the upload status. Always check the display before removing a camera from the dock; do not remove if a firmware update is in progress.

DISPLAY

The display will rotate automatically from docked to operational mode; it will automatically dim after 10 seconds of inactivity.



- Event recording initiated by button
- Event recording initiated by signal from another camera
- Event recording initiated by signal from a car
- Audio is muted or disabled
- Covert mode is enabled (no sounds, vibrations, or LED)
- Battery status, changes to red when less than 10%
- Battery is charging (when docked)
- Pre-Event recording is active
- Background recording is active
- Camera remote activation signal is broadcasting

FIELD NOTIFICATIONS				
Action	Display	Sound	Vibration	Status LED Ring
Power On		None	None	Off
Power Off		None	Short Pulse	Off
Not ready, no user (RFID Login only)		3 Short Tones	3 Pulses Every 30s	Off
Ready to Event Record		None	None	Off or Light Blue
Event Recording Started by Event Button		Short Chirp Up	Short Pulse	Bright Blue
Event Recording Started by Another BODYCAM		Short Chirp Up	Short Pulse	Bright Blue
Event Recording Started by Signal from a Camera		Short Chirp Up	Short Pulse	Bright Blue
Event Recording Stopped		Short Chirp Down	Long Pulse	Return to READY
Audio Muted		None	None	No Change
Audio Unmuted		None	None	No Change
Enter Covert Mode		None	None	Off
Exit Covert Mode		None	None	Return to Normal
Low Battery >10% Battery Remaining		Low Battery (Verbal)	Short Pulse	No Change
Low Storage <15% Space Remaining		Low Storage (Verbal)	Short Pulse	No Change
Storage Full, Cannot Continue Recording		Storage Full (Verbal)	Short Pulse	Off